

Product: Acoustic Wallpaper

Category: Acoustic Wallpaper

1. Description

Our acoustic wallpaper range can be butt join or double cut method for installation. This process allows the design to be matched correctly between two panels/ drops.

2. What you will need

To get started you will need the following:

- Step ladder
- Ruler (recommended size 100cm) or straight edge
- Pencil
- Plastic squeegee
- Blade cutter
- Damp cloth and bucket of clean warm water
- Pasting brush or roller
- Spirit level
- Adhesive in the form of flake or heavy duty ready mix (Fabric Backed) depending on the substrate used.
Please follow the mixing instructions carefully (Recommended brand – Bartoline)

3. Wall Surfaces

- Walls should be smooth and flat, preferably primed with an oil based primer for good adhesion. Please consult our Wall Preparation Guideline for more information.
- It is the responsibility of the client/ professional/ contractor/ painter to ensure that walls are prepared correctly for wallpaper application. Failure to do so may result in a breakdown of the wall surface (delaminate) and WCI Wallpapers Pty Ltd accept no liability as a result of incorrect wallpaper preparation. If unsure, please contact us for more information about how to prepare your walls for wallpaper.
- It can also be recommended to size the wall with adhesive to create another layer for the wallpaper to adhere to. This can sometimes be useful if you do not know what the wall was painted with and creates a barrier for the wallpaper to adhere to and may prevent the possibility of the wall surface breaking down.
- Walls should also be checked for moisture content. Using a moisture meter, measure the wall surface and it is recommended that wall coverings should not be installed if the moisture reading is more than 5%.

4. Additional Information

- Product is recommended for internal use only by qualified professionals.
- Installations should be carried out by a professional applicator with knowledge of installing wallpapers.

- It is the client or installers responsibility to check the rolls BEFORE application. After the 3rd drop, assess the installation before continuing. If there are any manufacturing faults with the wallpaper, stop immediately and contact us before proceeding. Failure to do so will void the manufacturer's warranty and no costs will be entertained for replacement of either material or labour.
- Wall coverings should be installed in an ambient temperature of 20-25 degrees.
- Please get in touch with us if you require any further information about the installation process. You can contact our technical team via email at info@wallcoverings.co.za.

5. Installation Guideline

Please see installation guideline below provided by manufacturer.

Hanging instructions

General information

- Please check that the delivered product matches your order (pattern number, length, batch number, shade) and that it has not been damaged during transport (otherwise please mention any reservation on the carrier's delivery receipt).
- The D.T.U 59.4 "Applying wallpaper and wallcoverings" document published by AFNOR in line with industry standards NF P 74 -204 - 1&2 provides guidelines to hang wallcoverings and engages the hanger's responsibility. It will be used as a reference in the event of a dispute.
- Additional length is added to orders where a defect is indicated on the edge of the wallcovering. Should a fault be indicated on the edge of the paper, additional length will be added. Should you notice any non-reported fault, or encounter any problems while hanging, please stop immediately and contact us. No complaint may be accepted if more than 3 strips have been laid, be it for the wallcovering itself or for hanging and stripping expenses.
- Always store rolls on a flat surface and in a dry place. Make sure lighting is sufficient to check and hang the wallpaper correctly. Hang 3 strips then check the result.
- Recommended conditions:
+10 °C < Temperature > +30 °C
Hygrometry < 65% RH

Preparing the wall

The hanger assumes liability for preparing the wall
A WELL PREPARED WALL = 80% OF THE JOB'S SUCCESS

- Walls must be:
Solid: the wall must be resistant, stable and hard.
Sound and dry: sources of damp must be treated, any saltpetre and mold removed.
Clean: remove any dust and previous wallcoverings, then wash.
Smooth and even: to ensure a neat finish.
Uniform: to prevent transparency.
- Of average absorbency (water drop test), otherwise:

For new, overly absorbent walls (plaster, plaster render, plasterboard, cement), apply a thin layer of primer such as Metylan I 200 or diluted acrylic paint.

For soft or crumbly old plaster walls, apply a hardener such as Metylan I 400 or a coat of glycerophthalic primer diluted by adding 20 to 30% of white spirit.

Old, sealed, walls (lacquered or painted with fully adhesive oil-based paint) should be washed using an alkaline solution and rinsed.

Choosing the adhesive

- On walls with average absorbency:

OVALIT TM, by Metylan (HENKEL)
Apply with a medium nap roller, such as a 12 mm nylon bristle
Load well to apply 250 g/m²
- On sealed walls:

OVALIT F (+/- 250 - 300 g/m²)
Apply using a foam roller such as CREPI FIN
- For specific areas such as joints (doors, skirting), inner and outer corners, posts, ceiling edges:

OVALIT F, or apply undiluted OVALIT S with a B2 or B3 serrated spatula to ensure smooth coverage and avoid overflow, use around 550 g/m².

Tools

Wallpaper spatula



Rubber smoothing roller



Serrated spatula



Pasting roller



Cutting tool such as a Stanley knife



Hanging

1. The wallcovering should be hung in the order marked on the rolls. Likewise, number each strip and hang in numerical order.
2. Cut the strips and roll them up into non-tightened rolls, with the pattern on the inside – see demonstration video. Do not fold or crush the wallcovering as this may mark the flocking and PVC coating.
3. Apply the adhesive following the instructions below. Paste a surface the size of about 1 strip + around 10 cm, from bottom to top.
4. Check that it is level, then lay the 1st strip on the freshly applied adhesive. Smooth upwards using a rubber roller, so that the covering is not deformed. Do not press too hard around the edges of the strip as this could cause shrinkage of the area covered by the wallcovering.
5. Hang the 2nd strip edge to edge to create a butt seam, following the direction and match repeat shown in the appendix. To make it easier to hang the strip and create the seam, please fold the wallcovering in half widthways. Once the butt seam has been completed over +/- 1m, unroll the rest of the length horizontally onto the adhesive and continue the seam across the top part before smoothing.


A butt seam is easier to achieve, however you can also opt for a double cut overlap using a fine bladed cutter or Stanley knife.

6. Once the strips have been joined, smooth over the seam with the rubber roller, across both strips at the same time to prevent a dip. If the two strips are not perfectly joined, bring them closer together by gently brushing the wallcovering with the palms of both hands in concentric circles, placing hands +/- 20 cm from the seam and pressing lightly. Do not press the seam with your fingers or any other tools (except for the Polyform Panel pattern whose structured edges of the joint must be flattened in the glue)

You can view a demonstration video by flashing the QR code printed on this document or on the website

7. Trim at the ceiling and skirting using a fine bladed cutter or Stanley knife and fixing the wallcovering securely to the adhesive with a wide, rigid spatula.
8. If adhesive spills over on to the wallcovering, remove the surplus with the tip of a spatula and wash the remainder with a clean sponge and warm water. If any adhesive remains once dry, repeat the procedure using warm water, adding a little adhesive dissolvent if required.

Demonstration video

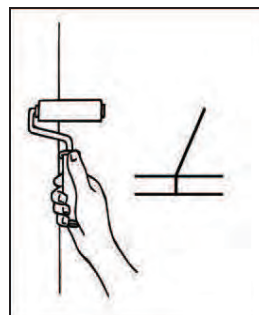

Technical information

- Should you need any further information, should you need help getting started please contact the Texdecor team on

Tel 0033 (0)3 20 61 75 41

- You may find every technical and legal documents concerning Texdecor wallcoverings (DoP, technical data, hanging instructions, FR certification, etc) on our website

www.texdecor.com

Texdecor, 2 rue d'Hem, 59780 Willems. Head Office - France

- **Declaration of performance:**

DoP – CPR – Vinacoustic available from www.texdecor.com

Instructions de pose / Hanging recommendations / Underbindliche
klebeempfehlung / Plaatsingsvoorschriften / Intrucciones de colocación

Uni / plain / Liso / Effen

DUNE ref 9023 -- --

TIVOLI ref 9054 1- --

URBAN ref 9054 2- --

KATSURA ref 9136 -- --

KATSURA REFLECT ref 9137 -- --

ABACA ref 9039 -- --


**Motif / design / diseño / muster / motief**

ABACA 1 / ref 9039 2- --




**Instructions de pose / Hanging recommendations / Underbindliche klebeempfehlung
Plaatsingsvoorschriften / Intrucciones de colocación**


Motif / Design / Muster / Motief / Diseño: PFY 9102 ...

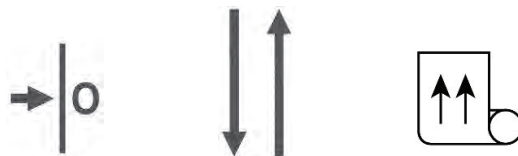


EOLE

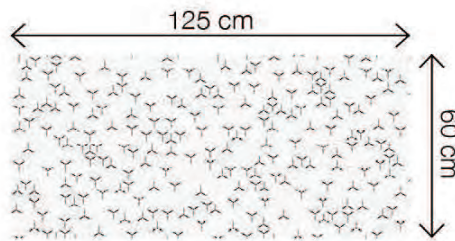

Motif / Design / Muster / Motief / Diseño: PFY 9101 ...


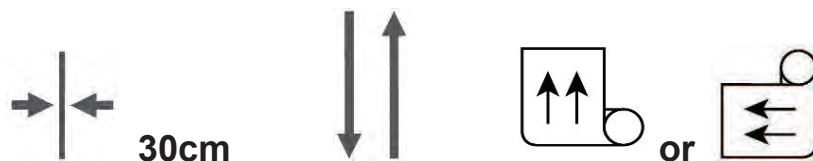


COUTURE

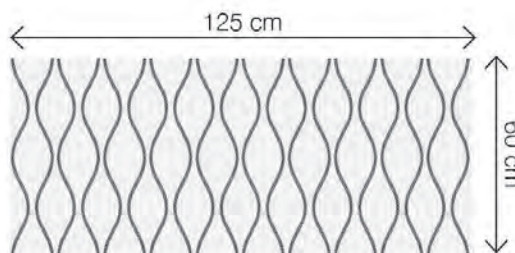

Motif / Design / Muster / Motief / Diseño: PFY 9103...


POLYFORM PANEL
Rapport / Repeat / Raport

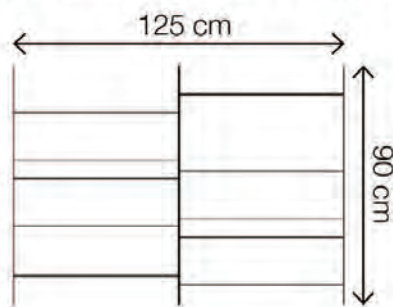

or




3 Possibilités / 3 Possibilities / 3 Mogelijkheden / 3 Möglichkeiten/ 3 Posibilidades:

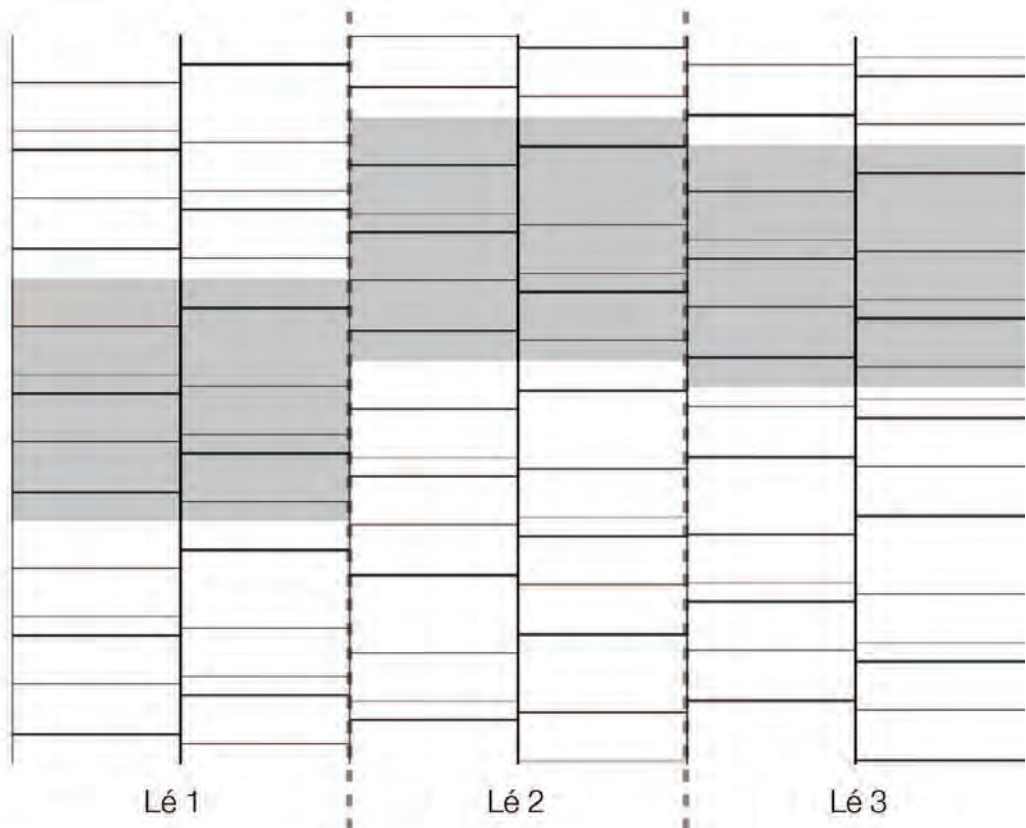

3 calepinages possibles, 3 different layouts, 3 colocaciones diferentes :

→ | ←
90 cm

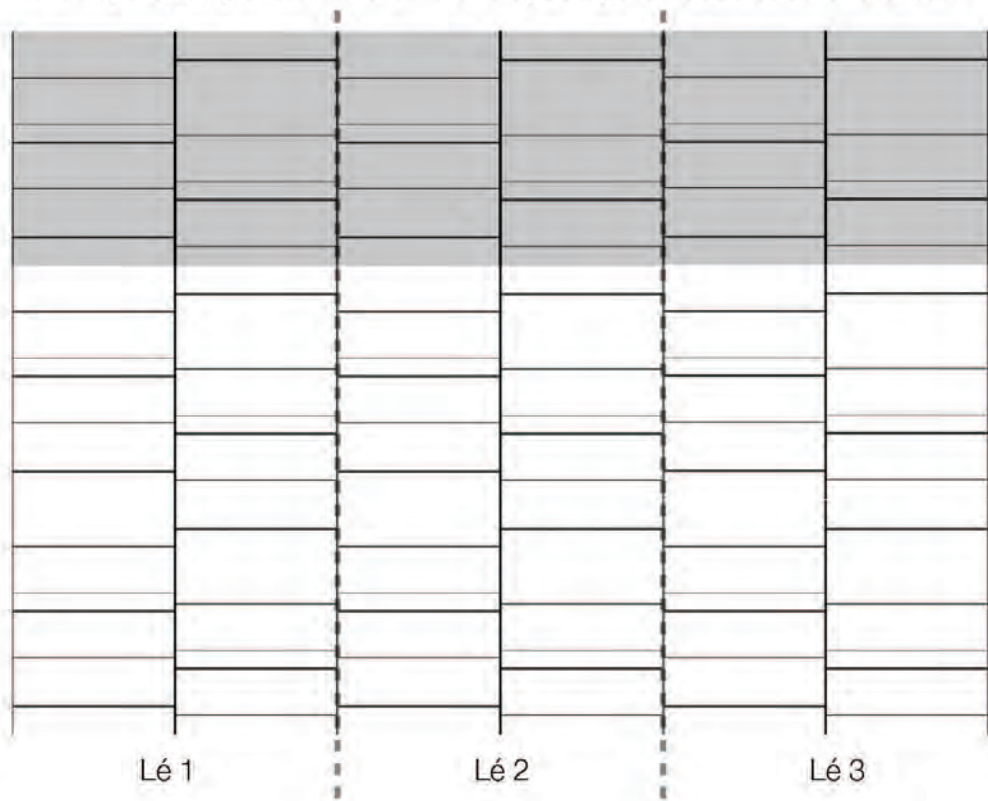

→ | ←
22 cm

